

INSTALL INSTRUCTIONS C-VS-1000-TAH

VEHICLE SPECIFIC CONSOLE

2007-2014 CHEVY/GMC SUBURBAN/TAHOE/YUKON XL/ YUKON/AVALANCHE

TOOLS REQUIRED:


Ratcheting wrench
Metric/Standard Socket Set
Standard Wrench Set

Power drill w/ 1/8" drill bit (optional)
Screwdriver set
T-20 torx bit

HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
1	OEM switch bracket	CM001800-3
4	1/4-20 Serrated nut	GSM30023
2	1/4-20 x 3/4" Hex bolt	GSM33001
2	#10 x 3/4" Sheet metal screw	GSM33195
1	Torx screw hardware kit	C-HK-1

C-VS-1000-TAH

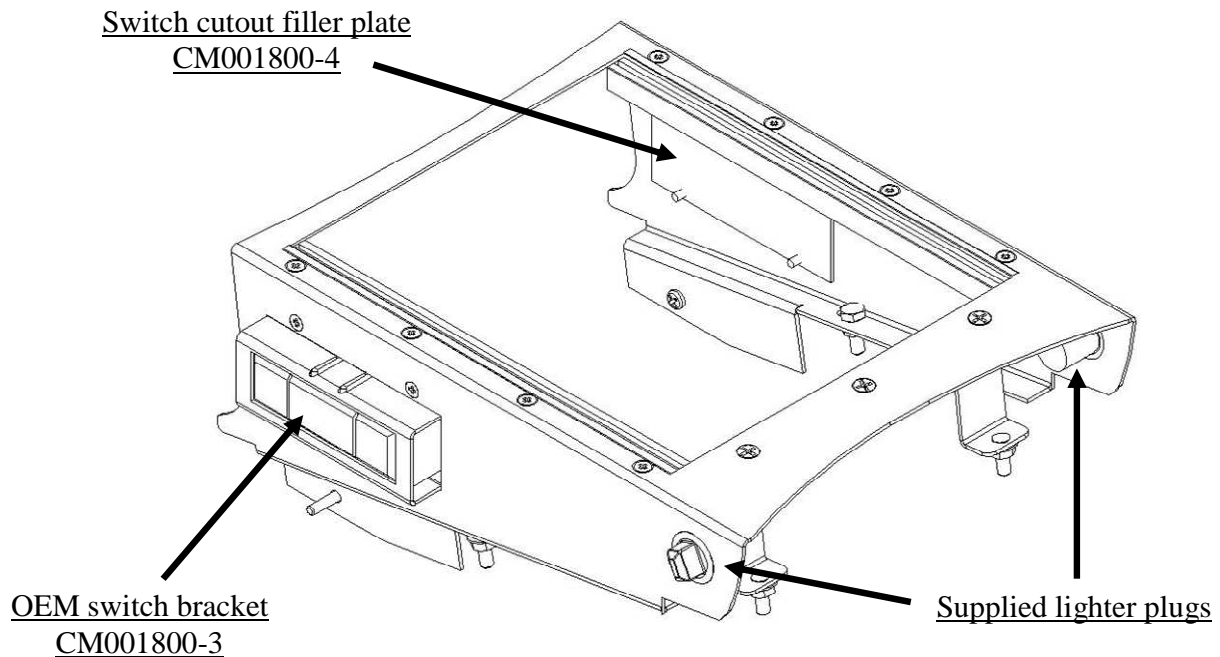



View of OEM / Factory full-length console.

NOTE:

The mount bolts for the OEM center console may need to be loosened in order to properly readjust the position so it will accept the New C-VS-1000-TAH console.

Tighten OEM bolts when done.



Remove factory cup holder/accessory pocket from console



If your console is not equipped with adjustable pedal, tow package, and power brake switches proceed to step #13



CAREFULLY separate trim bezel from dashboard



Using a flat head screwdriver concentrate pressure on or around the trim bezels “J” clips



Remove entire bezel and put aside.



Remove factory trim screws to remove the lower switch panel on dashboard



Remove factory switch box from trim panel



Using a small flat head screwdriver, unclip fastener



Unplug switch and set aside for later install



View of factory console at this time



Install switch box into C-VS-1000-TAH (if necessary)



Attach switch box to console using T-20 torx screws. Do not over tighten screws. This will cause the switches to “stick” in the ON position.

NOTE:
The mount bolts for the OEM center console may need to be loosened in order to properly readjust the position so it will accept the New C-VS-1000-TAH console. Tighten OEM bolts when done.

NOTE: Wrapping the switch assembly with electrical tape works well for the screws to push against in step #12.



Install lighter plugs and extend wires as necessary.




Slide C-VS-1000-TAH, front side first, as shown above.



Carefully drop backside of console as shown




Re-attach factory plug into switch box

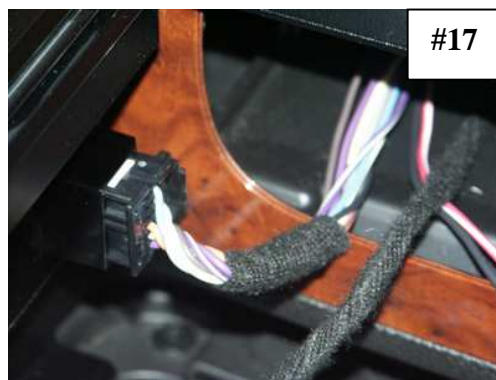

Be sure plug is secure and wires are carefully routed so not to chafe



Align rear-mounting studs into factory console holes and attach using 1/4" Serrated nuts.

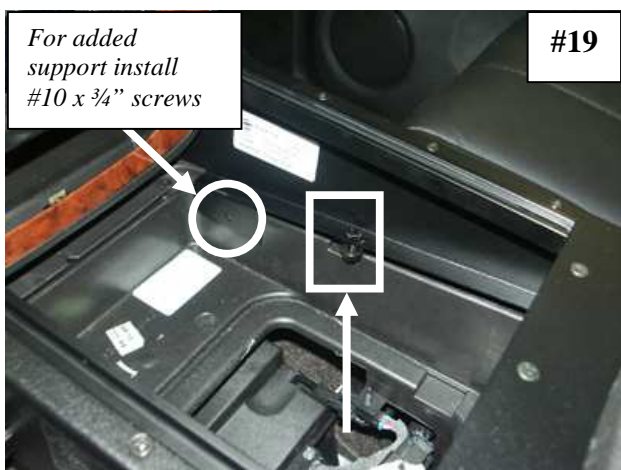

Attach middle of VS console to factory console using 1/4" x 3/4" Hex bolts and serrated nuts. For added support #10 x 3/4" screws can be installed on front side of console



Route all wiring to console. Wire, and install control heads and accessories (Sold separately)